


PICO NEO 3

Getting Familiar with the Controllers

The PICO Neo 3 controllers are designed to be intuitive and easy to use:

- » **Trigger Button:** Located at the front of the controller, this allows you to point, select, and interact within the VR environment.
- » **Grip Button:** On the side of the controller, used to grab and hold virtual objects.
- » **Home Button:** Found on the front of the controller, this takes you to the main menu or acts as a back button in some cases.
- » **Thumbstick:** Used for navigation and menu scrolling within the VR interface.

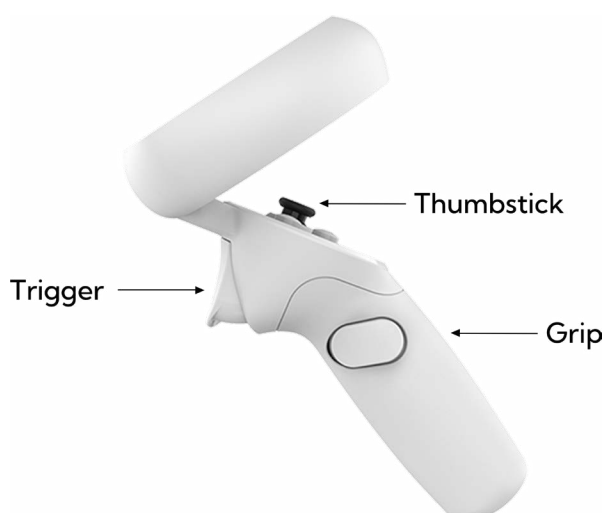

To use the controllers, simply slide open the handle to insert AA batteries.

If the controllers disconnect, press and hold the Home button for 2 seconds to reconnect them.

